


Design: Beck Design

# freistil 136

#### **PROFILE**

# **TECHNICAL DESIGN**

- · Wooden inner frame
- Spring system: nosag spring
- Seat in polyurethane foam "density" 37 kg/m³, covered with a pad filled with foam fibre mix
- Back in polyurethane foam, "density" 30 kg/m³, covered with a pad filled with foam fibre mix
- Foot: steel single foot, powder coating jet black RAL 9005 The data of "density" can vary in a range of +/- 10 %.

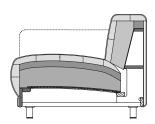


#### **LEG VERSIONS**

Steel single foot, RAL 9005 Jet black



#### **INFORMATION**

- Ticking chamber webs in the pads can show through to the cover (= characteristic feature of high-grade upholstery pad workmanship).
- The range is only suitable for velour covers to a limited extent. The fell seams and piping can lead to lines in the pile.
- With modular systems, velour covers can lead to different pile alignments and therefore to different shine properties.
- There are more dividing seams in leather covers than in fabric covers. Detailed information about this can be found in the Info section.
- For ergonomic reasons, only the seat area of model ASS-PSZ not the leg rest is sprung. So if the leg rest is used as a seat it will feel much firmer.
- Repeat and patterned fabrics cannot be processed with this range.
- The cover material should be particularly soft and have a degree of thickness, due to the special corner stitching. Thin materials (especially fabrics) and materials that are strong along the fibre (leathers in particular) do not produce a harmonious overall appearance.

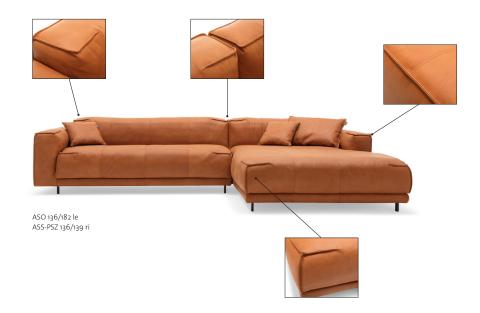

SOFAS freistil 136 SOFAS freistil 136 SOFAS




# freistil 136


# **OVERVIEW OF RANGE**

# Front view/Top view

Sofa in widths: 183, 203, 223, 243 cm




SOB 136/183




SOB 136/183



SOB 136/223



SOB 136/223






- 203

SOB 136/203



SOB 136/243




SOB 136/243

# **OVERVIEW OF RANGE**


# Front view/Top view

Sectional sofa in widths: 162, 182, 202 cm




ASO 136/162 le

ASO 136/162 ri




ASO 136/162 le

ASO 136/162 ri



ASO 136/162 le

ASO 136/162 ri



ASO 136/182 le

ASO 136/182 ri


SOFAS freistil 136




# **OVERVIEW OF RANGE**


# Front view/Top view

#### Sectional sofa in widths: 162, 182, 202 cm






# Corner sectional sofa: 242 cm

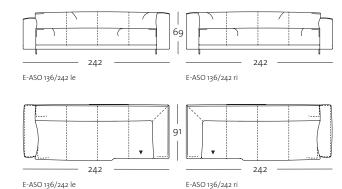


# **OVERVIEW OF RANGE**

# Front view/Top view


#### Closing chair with fixed footstool: 119 und 139 cm





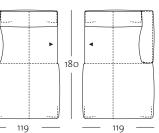

ASS-PSZ 136/119 le ASS-PSZ 136/119 ri





180 139 139

ASS-PSZ 136/139 le

ASS-PSZ 136/139 ri


SOFAS freistil 136 freistil 136 SOFAS




# **OVERVIEW OF RANGE**

# Front view/Top view

#### Sectional bench with footstool: 164 cm



ARB-PSZ 136/164 le ARB-PSZ 136/164 ri



ARB-PSZ 136/164 le ARB-PSZ 136/164 ri

#### Footstool: 104 x 74 cm



PB 136/104 x 74




PB 136/104 x 74

#### Side views

#### Normal depth




SOB 136/183



ASS-PSZ 136/119

PB 136/104 x 74

Extra depth



UE-SOB-ASO 136

# **EXAMPLES OF COMBINATIONS**

Examples of combinations are not shown to scale.

